

PARTS LIST



Ref.	Qty	Description
A	(2)	3.5" Square Poles -12' Long
B	(2)	Collar with Reel and Hardware
C	(2)	Collar with Pulley
D	(2)	Collar with Eye bolts
E	(2)	Pole Caps
F	(1)	VB-1200 Volleyball Net, 36"H x 32'L Lacing Cord (included with net)


SOLD SEPARATELY

G	(1)	Pair of 42" SQ Ground Sleeves (#65275) (GS-42SQ) (Recommended but optional)
---	-----	---

RECOMMENDED TOOLS

Level
Ladder or Step Stool
Concrete
Shovel
1/4" Allen Wrench
(Included with Reel)
9/16" Wrench
Measuring Tape

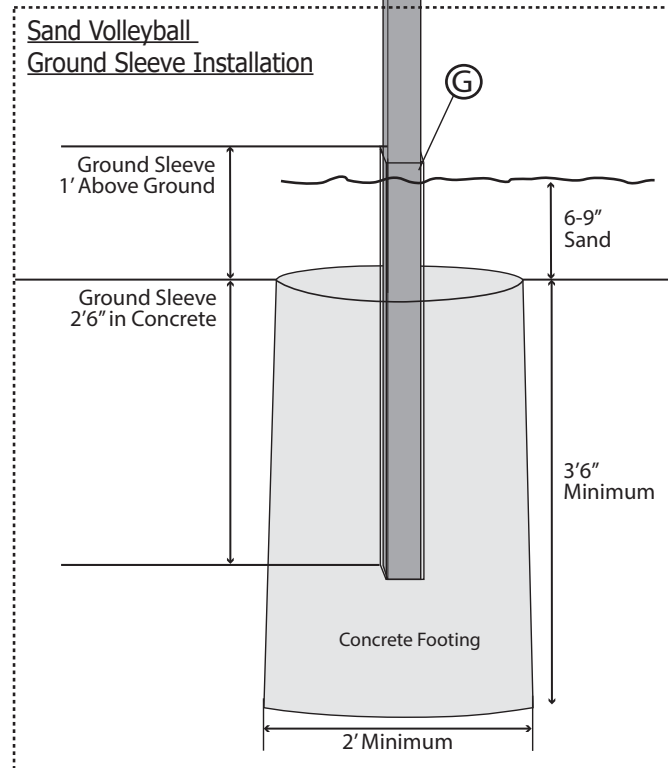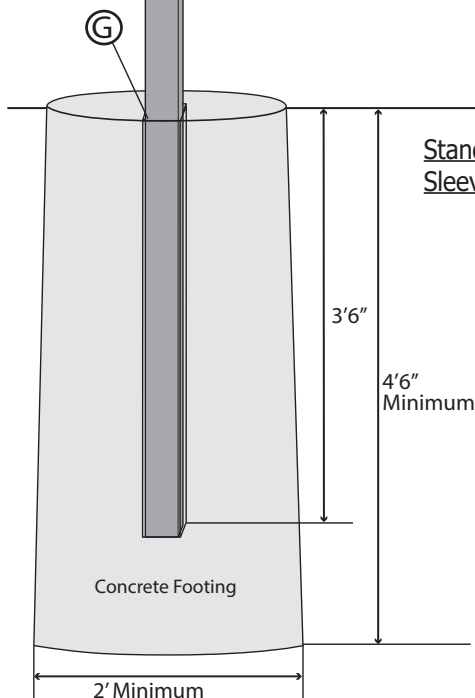

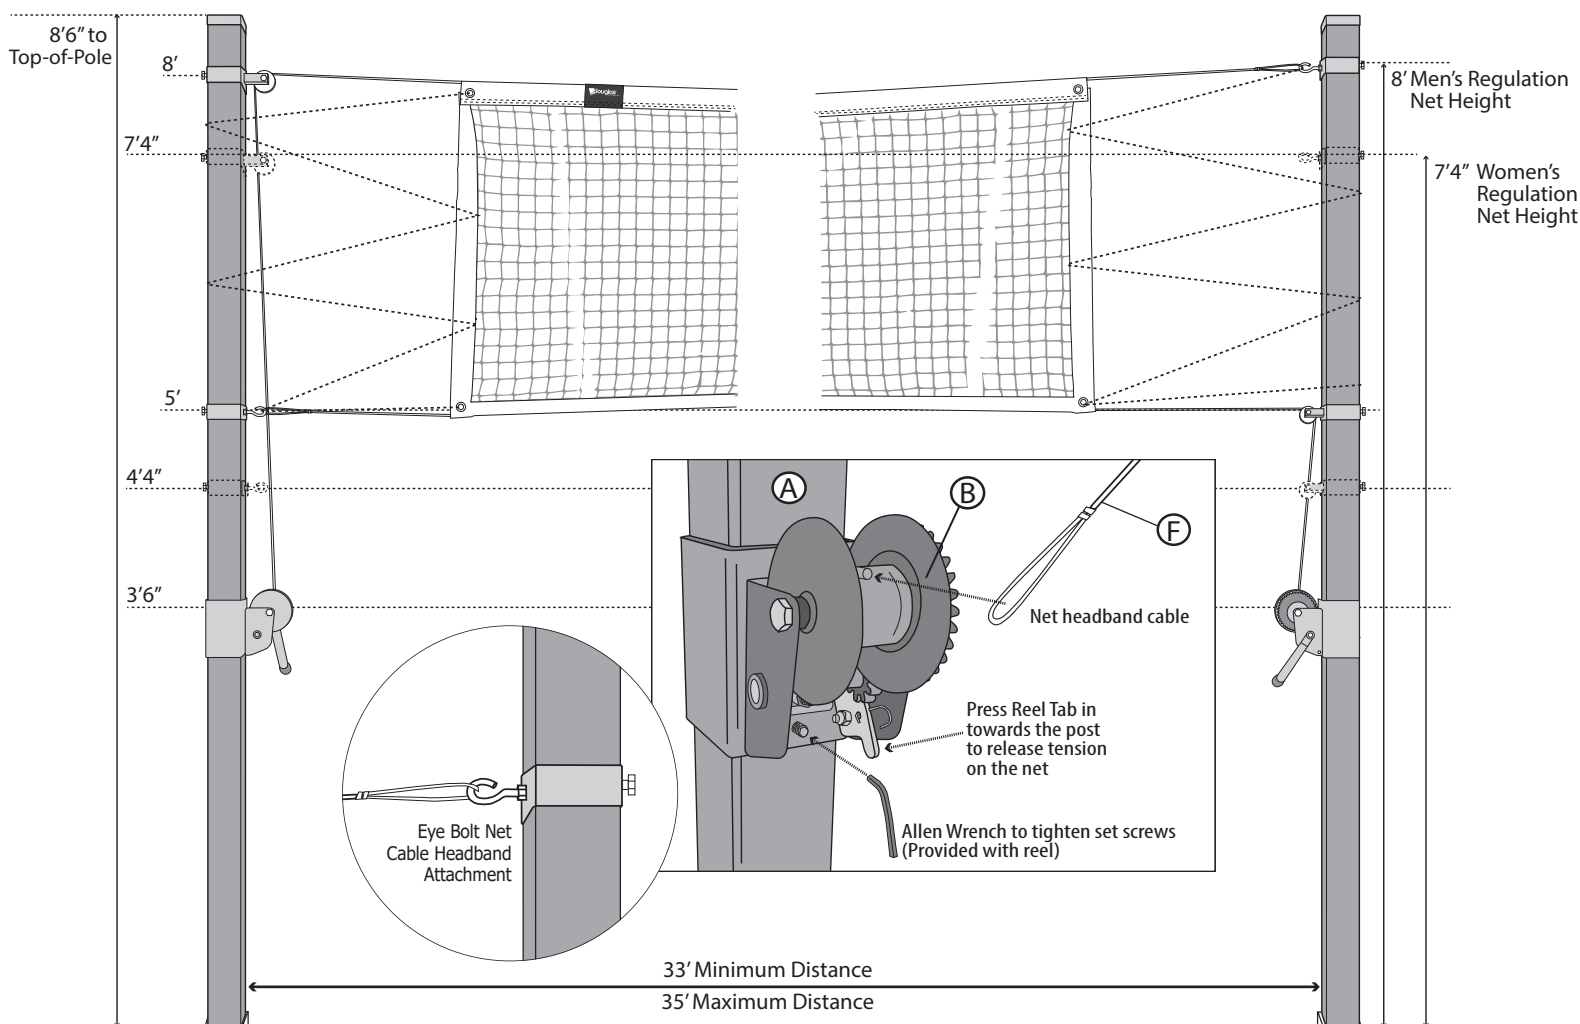

POLE INSTALLATION

1. The poles should be sunk to the depths shown in the illustration on page 1, with concrete 12" below the end of the pole. The maximum recommended pole spacing is 35' apart. The optional ground sleeves are recommended. Concrete installation varies depending on your area's soil condition.
2. Slide reel and all collars over the top of poles according to the illustration. Secure collars with reels according to your desired volleyball height. For this you will need a 9/16" wrench and a ladder.
3. To secure collars, use a 9/16" wrench and tighten each bolt on the backside of the pole.
4. To set the reel in place, use the provided Allen wrench to tighten the set screws on the front of the pole. One set screw is underneath the reel, and the other is above the reel.
5. If you plan on adjusting the net between heights, tighten the collars just enough to set in place. Over-tightening will make it difficult to reset the collars.
6. Secure the handle to the reel and place caps on the tops of the poles.

NET INSTALLATION

1. Attach one headband cable loop to the post with the top eye bolt collar set at 7'4" or 8'.
2. On the post with the top pulley collar, run the cable loop over and down through the pulley.
3. Continue pulling the net cable loop down to the hook on the reel. Turn the reel handle clockwise and begin cranking until the net is taught between the posts.
4. Now, follow the same steps for the bottom cable. Attach one end of the net to the post with the lower eye bolt collar. On the other post, run the cable loop over and down through the pulley.
5. Continue pulling the net cable loop down to the hook on the reel. Turn the reel handle clockwise and begin cranking until the net is taught between the posts.
6. Use the provided lacing cord to secure sides of net to the post.